

Assembly Guide to using the ramshackle 20mm Armour

20mm Resin Armour Kit pack




Here is my starting vehicle. Its made by Matchbox and used here without permission.



The kit is supplied as shown. This is the "Just Armour" set, although it does contain some guns.



To start snap the waste resin off the parts.

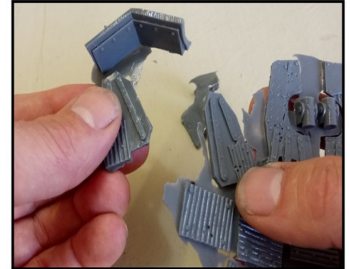

Clip the remains of the waste resin from the parts



Use a metal work file to remove the sharp edges.



The resin may have release agent or dirt on it, so clean the parts with detergent.




Give the parts a good scrub with an old toothbrush.



Use small amounts of putty to hold the parts in place. Super glue the putty to the car.




Add some more super glue. The putty holds the part in place while the glue sets.

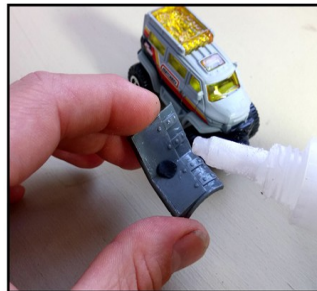

Add a bit more putty where its needed and more glue.



Remove any waste putty with a knife.

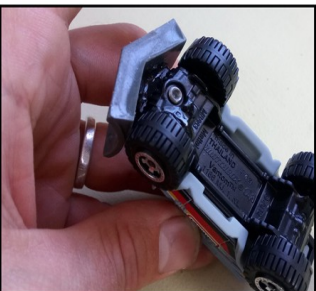

Here is another shot to show the bond on the bottom.



Add more armour, repeating the same process.



Run more super glue into the bonds to make sure they are nice and strong.



Here is the model assembled and ready to paint.